



COMMERCIAL SERIES  
TREADMILL  
OWNER'S GUIDE

CS8.0

CS6.0

CS4.0



# THANK YOU FOR SELECTING TRUE

In 1981 Frank Trulaske launched True Fitness Technology with one goal in mind – *to make the finest fitness equipment on the market.*

His team began by manufacturing premium, handcrafted treadmills with a focus on quality and durability. Now, 25 years later, True Fitness has established its reputation as one of the oldest and most respected fitness equipment manufacturers worldwide.

While True treadmills continue to enjoy top reviews from major consumer magazines and fitness experts, its line of products has expanded.



“OUR ORIGINAL GOAL WAS TO BUILD THE WORLD’S BEST FITNESS EQUIPMENT, AND TODAY WE BELIEVE WE’RE DOING IT!”

-FRANK TRULASKE

Today True also produces award-winning exercise bikes, ellipticals, and TrueStretch, our patented flexibility unit.

True Fitness is dedicated to always staying a step ahead of the competition and supplying its valued customers with the finest workout equipment in the industry. True’s equipment is designed to accommodate the needs of everyone from the professional athlete to the weekend warrior.

So, with a solid 25 years of fitness experience, you can count on True Fitness both now and in the future to meet your goals for a happy, healthy lifestyle.

# REVIEW FOR YOUR SAFETY

## IMPORTANT SAFETY INSTRUCTIONS

*When using this exercise machine, basic precautions should always be followed, including the following:*

Read all instructions before using this treadmill.

Consult your physician before beginning any exercise program.

Do not use if you have a cold or fever.

**Warning: to reduce the risk of burns, fire and electric shock and injury to persons, follow these instructions:**

**Danger:** To reduce the risk of electric shock, always unplug the treadmill before cleaning.

Unplug it from the outlet when not in use and before any service is performed.

Keep the power cord away from heated surfaces.

Never operate this treadmill if it has a damaged power cord or plug, if it is not working properly, if it has been damaged or dropped, or if it has been submerged in water. In these cases, this treadmill should be examined by a qualified service technician.

*Other safety precautions:*

Close supervision is necessary when the treadmill is being used by or near children, or disabled persons.

Use this treadmill only for its intended use as described in this manual.

Do not use attachments not recommended by the manufacturer. Never drop or insert any object into any opening.

Do not allow animals on or near the treadmill.

Use the treadmill indoors only.

Never use the treadmill near water or while wet. Using this treadmill around a pool, hot tub or sauna will void the warranty.

Do not operate where aerosol (spray) products are being used or where oxygen is being administered.

Allow only trained personnel to service this equipment.

Avoid the possibility of bystanders being struck or caught between moving parts by making sure that they are out of reach of this treadmill while it is in motion.

Allow only one person at a time on this treadmill.

---

# TABLE OF CONTENTS

## **Front Section**

Safety instructions,  
Quick Start Guide,  
Table of Contents,  
Model Differences  
and Starting and  
Stopping the  
Treadmill Safely.

**page 3**

## **1 - Basic Operation**

**page 11**

## **2 - Heart Rate Control**

**page 21**

## **3 - User Programs**

Three different types

**page 29**

## **4 - Fitness Tests**

**page 31**

## **5 - Fan**

**page 35**

## **6 - Designing an Exercise Program**

**page 37**

## **7- Care and Maintenance**

**page 45**

## **Appendix A**

**page 49**

## **Appendix B**

**page 51**





## **Appendix C**

**page 53**

## **Appendix D**

**page 55**

## BEFORE YOUR WORKOUT

**Quick Start** into a manual workout by pressing , or set up a different workout by selecting a workout and adjusting settings if necessary. Use   keys or numeric keys and press  to accept each setting.

## DURING YOUR WORKOUT

**Adjust speed or incline** at any time by using the dedicated **speed** and **incline** keys on the control pod or keyboard.

**Change data readouts** by pressing .

**Pause your workout** by pressing .

---

## STARTING AND STOPPING YOUR TREADMILL SAFELY

Place your feet on the straddle covers.

Attach the safety lanyard to your waistband.

Place the safety key on the key holder.

Set up your workout (see Chapter 1) and press .

Stop the treadmill by reducing speed to 2 mph, then press .

 
---

# MODEL DIFFERENCES

This new treadmill is part of the True Commercial Series treadmills. Since this owner's guide covers all three commercial models, you might notice descriptions of features that are different from your treadmill. The main differences are in the consoles.

Adds to CS 8.0:

- 8 Pre-set workouts
- Heart rate control
- Cooling fans
- Two window LCD display
- 3% decline

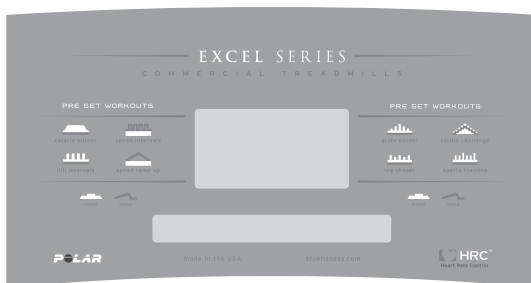

## CS 6.0

*Same as CS 8.0 except:*

 
- Single window LCD display
- No decline



## MODEL DIFFERENCES

## CS 4.0

- “Simple” LED display
- All controls on main keyboard
- Manual operation only

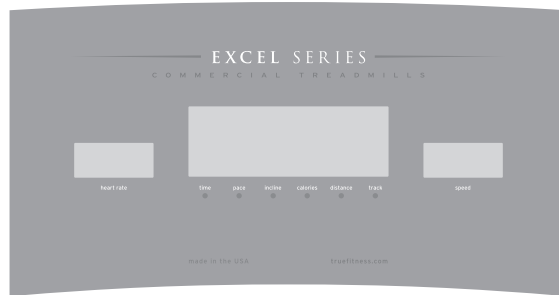

# BASIC OPERATIONS

IN THIS CHAPTER:

USING THE KEYBOARD  
QUICK SPEED  
HEART RATE MONITORING  
PRE-SET WORKOUTS  
ACTUAL SPEED DISPLAY

## **Chapter 1: Basic Operations**

Chapter 2: The Console

Chapter 3: User Programs

Chapter 4: Fitness Tests


Chapter 5: Fan Accessories




Chapter 6: Designing an Exercise Program




Chapter 7: Care and Maintenance




# USING THE KEYBOARD


## CHAPTER ONE: BASIC OPERATIONS

**Selecting Workouts:** Press any of the workout keys and press  to begin your workout using the default settings.

Before pressing , you may adjust other settings like Workout Time and Body Weight, pressing  after adjusting each setting. Press  at any time to begin your workout. Note that HRC workouts require settings adjustments.

**Adjusting Settings:** Use the numeric keypad or the   keys to adjust numeric settings. Press  to accept each settings adjustment.

**Control Pod / Primary Controls:** During your workout, press  to stop the treadmill and pause your workout. Press  to resume your workout. Press and hold  to clear your workout.

**Change Data Display:** During your workout, press  to change the data displayed.

**Safety Lanyard:** This magnetized cord must be in place on the treadmill balance bar location, and should be attached to your clothing. The treadmill will not operate if the lanyard is not attached.


## USING THE KEYBOARD

### CS 6.0 and CS 8.0 Workout Keys



### QUICK SPEED

**Important:** Quick speed keys change speed with a single key press, so take care in the keys you press.

Press , lighting the enable LED. Now the numeric keys function as speed change keys from 1 mph to 9 mph. Quickspeed is functional in any workout except fitness tests and Heart Rate Control.

Disable QuickSpeed by pressing  again.

---

### BODY WEIGHT

During workout set up, set a correct body weight *including clothes* so the treadmill can better estimate your calorie expenditure.

---

# HEART RATE MONITORING

## CHAPTER ONE: BASIC OPERATIONS

This treadmill can monitor your heart rate using either a chest strap or the metal grips on the hand rails (called contact heart rate or CHR pads). A chest strap transmits your heart rate to the treadmill via radio, and the CHR pads connect to a special computer circuit to extract your heart rate.

 


Although this treadmill functions fine without using the heart rate monitoring feature, this kind of monitoring gives you valuable feedback on your effort level. Chest strap monitoring also allows you to use Heart Rate Control, the most advanced exercise control system available.

When you wear a Polar® or compatible transmitter strap, the treadmill will display your heart rate as a digital beats-per-minute (bpm) readout.

The transmitter strap should be worn directly against your skin, about one inch below the pectoral muscles/breast line (see picture). Women should be careful to place the transmitter below their bra line.

Some moisture is necessary between the strap and your skin. Sweat from your exercise works best, but ordinary tap water may be used prior to your workout if desired.

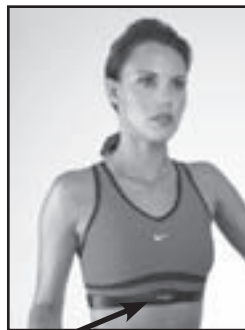

MONITORING  
YOUR  
HEART RATE

CHEST STRAP  
HEART RATE  
MONITORING

## CONTACT HEART RATE (CHR)

The contact heart rate (CHR) system lets you monitor your heart rate without wearing a strap.

Gently grasp the contact heart rate pads as shown.

When the system detects your hands, the Heart Rate label will start flashing in time with your heart beat. During this time, the system is analyzing and locking in your heart rate. Within about 15 seconds, your digital heart rate in beats per minute should be displayed.

**Important:** The CHR System should only be used while walking at speeds of 4 mph or lower. Above this speed the CHR accuracy is unavoidably unreliable due to large muscle movements.



# CONTACT HEART RATE

## CHAPTER ONE: BASIC OPERATIONS

1. Exercise with smooth body motions.
2. Breathe smoothly and regularly, and avoid talking. (Talking will cause unrepresentative heart rate spikes of 5 to 10 bpm.)
3. Grip the pads lightly, not tightly.
4. Make sure your hands are clean, free of both dirt and hand lotions.

When using a Heart Rate Control workout, it is best to use chest strap monitoring. These workouts work best with the extra accuracy gained from a chest-contact heart rate monitoring system.

---

### *A Note on CHR Accuracy*

*CHR monitoring may be a bit less accurate than a chest strap, since the heart rate signals are much stronger at the chest.*

*About 5% of the population cannot be picked up by any CHR system. This is because their heart is positioned in a more up-and-down manner in their chest, as opposed to leaning over to one side.*

FOR BEST  
CHR RESULTS

 
### PRE-SET WORKOUTS

Each workout has a four-minute warm up and a two-minute cool down. Speed or grade changes stay in effect until the next change is requested by the program. Changing the default workout time adds or removes segments; it does not stretch or compress the workout profile.

Change workout levels during your workout by pressing the key for the workout you are using (its LED will be lit), adjusting the numeric level, then pressing *(enter)*. Change to a new pre-set workout during your workout by pressing any of the present workout keys and pressing *(enter)* at your desired workout.

### WALKING: CALORIE BURN


In a walking workout, all speeds are under 4 mph. Increasing levels increases speed from 2 to 4 mph and grade from 4% to 10%; speed and grade stay constant in the work section. Speed or grade changes in the work section are permanent

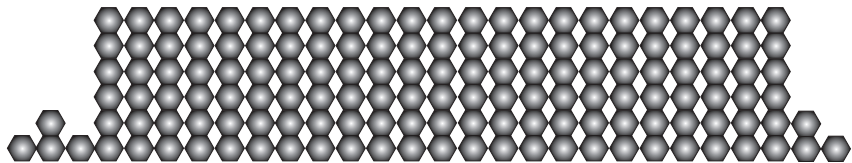

*Changes in Grade*

### WALKING: HILL INTERVALS

 Walking intervals with grade alternate between hills and nearly flat *in two-minute segments*. Speed changes are permanent; grade changes affect the current two-minute segment only.

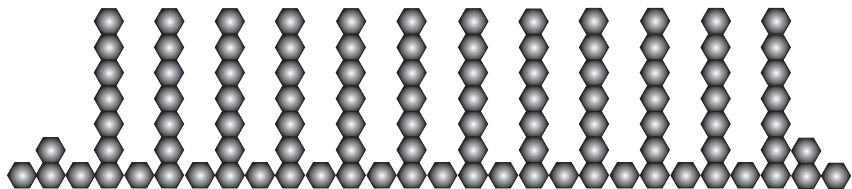


*Changes in Grade*

# PRE-SET WORKOUTS

 
## CHAPTER ONE: BASIC OPERATIONS

Zero-grade walking or running intervals are *in one-minute segments*. Grade changes are permanent; speed changes affect the current one-minute segment only.

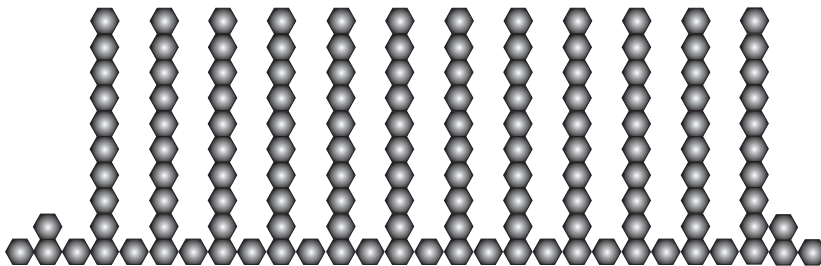

*Changes in Speed*

 Zero-grade gradually increases speed then decreases speed, *changing once per minute*. Grade changes are permanent; speed changes affect the current one-minute segment only.

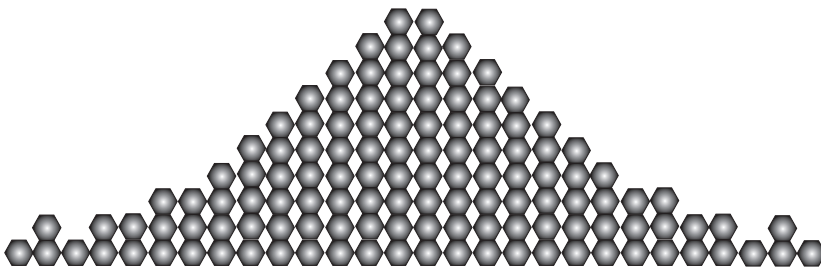

*Changes in Speed*


WALKING  
AND  
RUNNING:  
SPEED  
INTERVALS

WALKING  
AND  
RUNNING:  
SPEED  
RAMP-UP

These are True's original four pre-set workouts. Changing the workout time stretches and compresses the workout profile, in contrast to the four new pre-set workouts. Other differences are explained below in the individual workout sections.


### GLUTE BUSTER

 Incline changes in varying amounts in contrast to the new Hills workout, which has hills of the same size all throughout the workout.

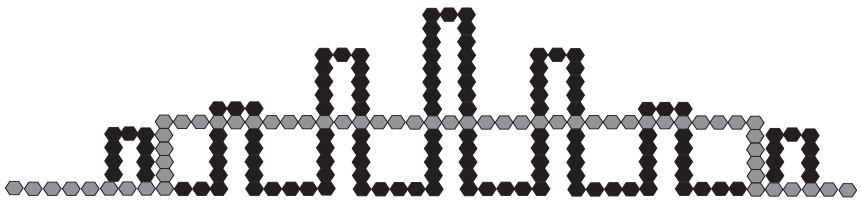



### LEG SHAPER

 Very similar to Hill Intervals, with varying incline changes.

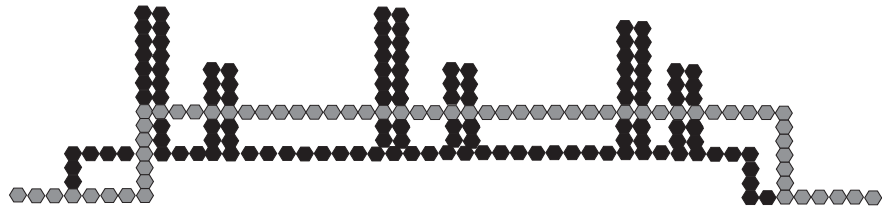

### CARDIO CHALLENGE

  
Similar to Speed Ramp, except both speed and grade change.

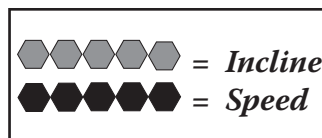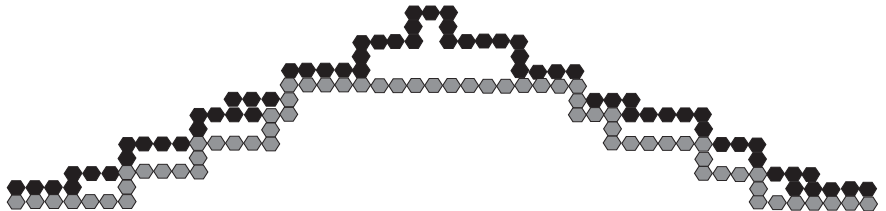

# CLASSIC PRE-SET WORKOUTS

## CHAPTER ONE: BASIC OPERATIONS

 Different from Speed Intervals 2 with the speed changing in varying amounts.

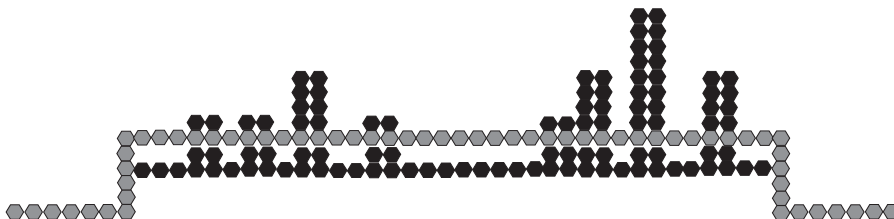

When the treadmill is changing to a new target speed, the matrix display readout will display the actual speed. As the speed is changing, the message center will display

TARGET = 12.0 MPH

Once the treadmill reaches the new target speed, the Speed readout will show the target speed.

SPORTS  
TRAINING

ACTUAL  
SPEED  
DISPLAY

# THE CONSOLE

IN THIS CHAPTER:  
KEYBOARD FUNCTION  
DISPLAY

Chapter 1: Basic Operations

**Chapter 2: The Console**

Chapter 3: User Programs

Chapter 4: Fitness Tests

Chapter 5: Fan Accessories

Chapter 6: Designing an Exercise Program

Chapter 7: Care and Maintenance

# CS 8.0 TREADMILL

## KEYBOARD

**Cool Down**  
Time period to cool down muscles and lower heart rate.

 
**Reset**  
Resets treadmill completely. Identical to pressing and holding STOP.

**Advanced Options**  
User programs and fitness tests.

**Numeric Keys**  
Direct entry of numeric data.

**HRC Cruise Control**  
While in any workout, set your current heart rate as the target heart rate.

**Activate Quickspeed**  
Enables the numeric keys to function as speed change keys from 1 mph to 9 mph. This is functional in any workout except fitness tests and heart rate control.

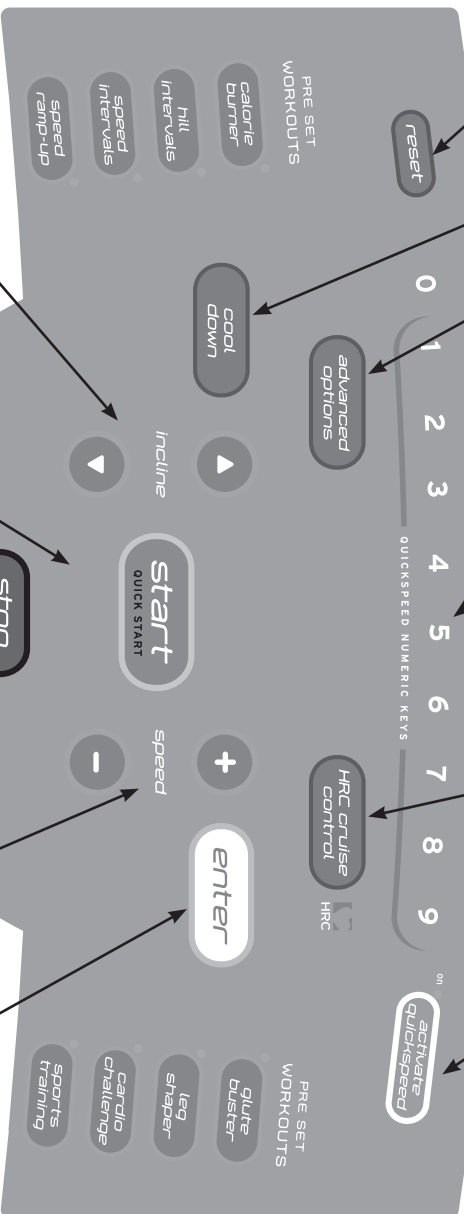

**Incline Up/Down**  
Adjusts incline. Also used to choose programs.

**Start/Quick Start**  
Starts the belt and begins the workout.

**Stop/Pause**  
Stops the belt and pauses workout. If held for 3 seconds, resets all workout information.

**Speed Slow/Fast**  
Adjusts speed in 0.1 mph increments. Also used to set weight and other workout parameters.

**Enter**  
Accepts workout parameters, and toggles the dual function displays.


# CS 8.0 KEYBOARD
 
## CHAPTER TWO: THE CONSOLE

# CS 8.0 TREADMILL DISPLAY



## CS 8.0 DISPLAY CHAPTER TWO: THE CONSOLE

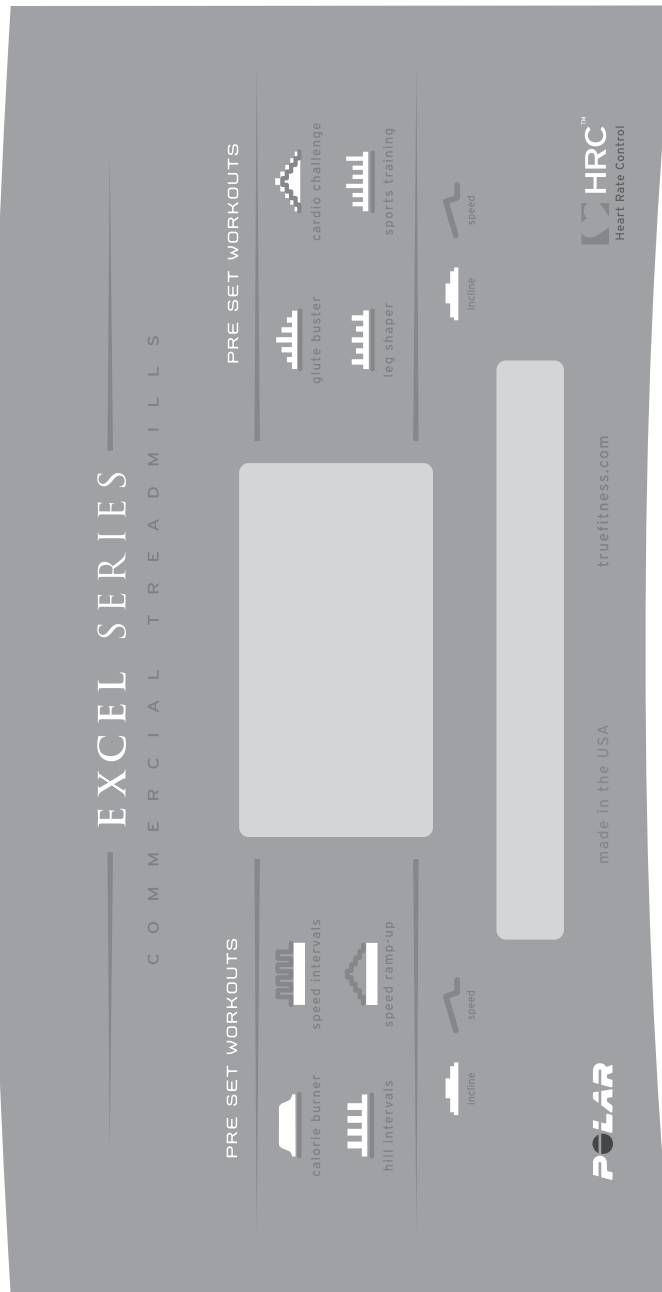

# CS 6.0 TREADMILL KEYBOARD

**Cool Down**  
Time period to cool down muscles and lower heart rate.

 
**Reset**  
Resets treadmill completely. Identical to pressing and holding STOP.

**Advanced Options**  
User programs and fitness tests.

**Numeric Keys**  
Direct entry of numeric data.

**HRC Cruise Control**  
While in any workout, set your current heart rate as the target heart rate.

**Activate QuickSpeed**  
Enables the numeric keys to function as speed change keys from 1 mph to 9 mph. This is functional in any workout except fitness tests and heart rate control.

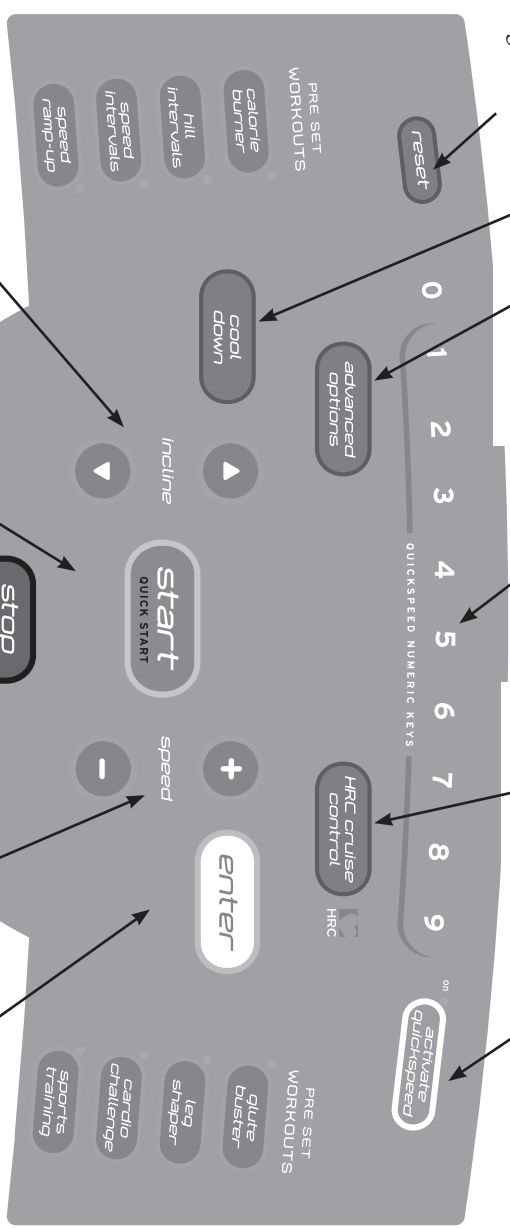

**Incline Up/Down**  
Adjusts incline. Also used to choose programs.

**Start/Quick Start**  
Starts the belt and begins the workout.

**Stop/Pause**  
Stops the belt and pauses workout. If held for 3 seconds, resets all workout information.


**Speed Slow/Fast**  
Adjusts speed in 0.1 mph increments. Also used to set weight and other workout parameters.

**Enter**  
Accepts workout parameters, and toggles the dual function displays.

# CS 6.0 TREADMILL DISPLAY


 
## CS 6.0 DISPLAY CHAPTER TWO: THE CONSOLE

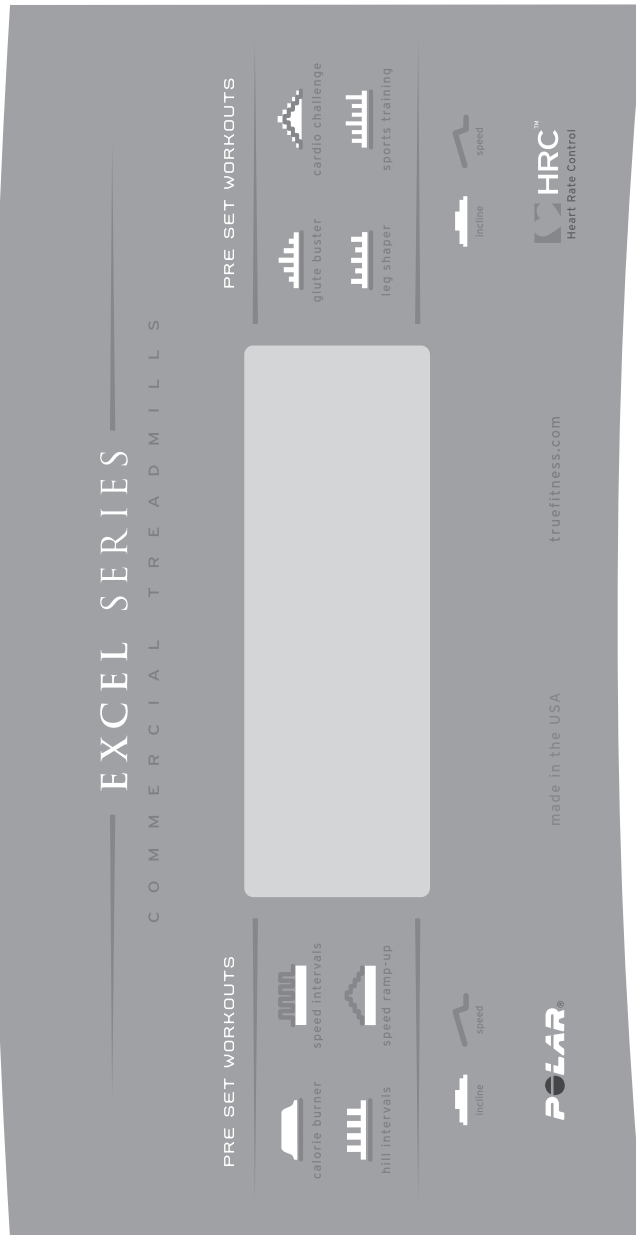


# CS 4.0 TREADMILL KEYBOARD

**Reset**  
Resets treadmill completely. Identical to pressing and holding STOP.

**Numeric Keys**  
Direct entry of numeric data.

 **Activate Quickspeed**  
Enables the numeric keys to function as speed change keys from 1 mph to 9 mph.

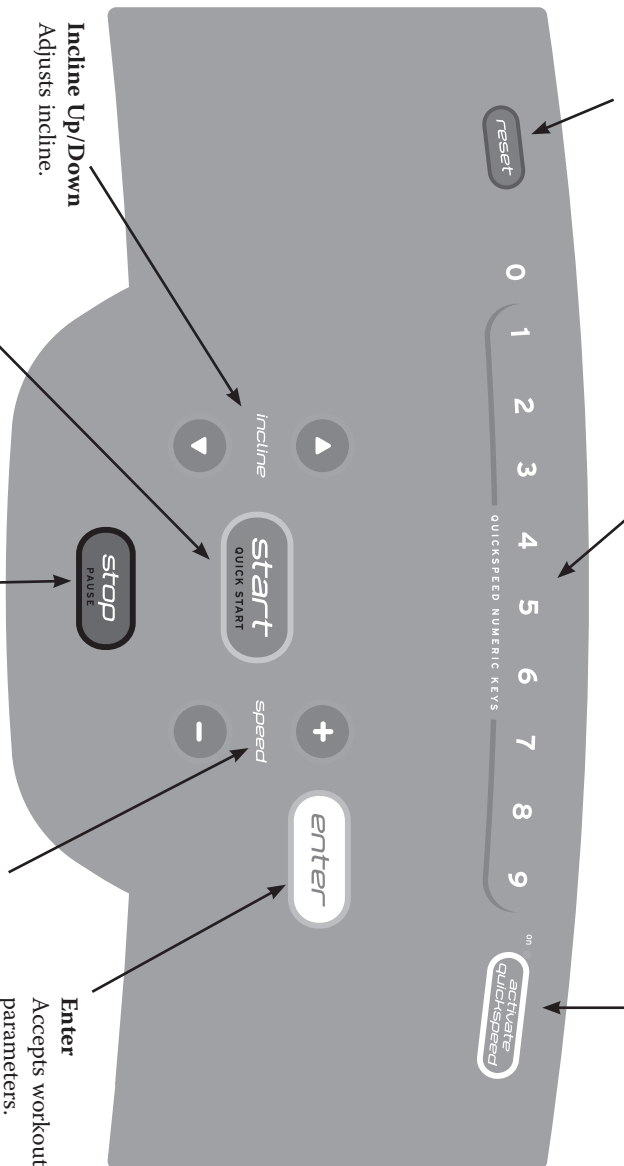

**Incline Up/Down**  
Adjusts incline.

**Start/Quick Start**  
Starts the belt and begins the workout.

**Stop/Pause**  
Stops the belt and pauses workout. If held for 3 seconds, resets all workout information.


**Speed Slow/Fast**  
Adjusts speed in 0.1 mph increments. Also used to set weight and other workout parameters.

**Enter**  
Accepts workout parameters.

## CS 4.0 KEYBOARD
 
### CHAPTER TWO: THE CONSOLE

# CS 4.0 TREADMILL DISPLAY

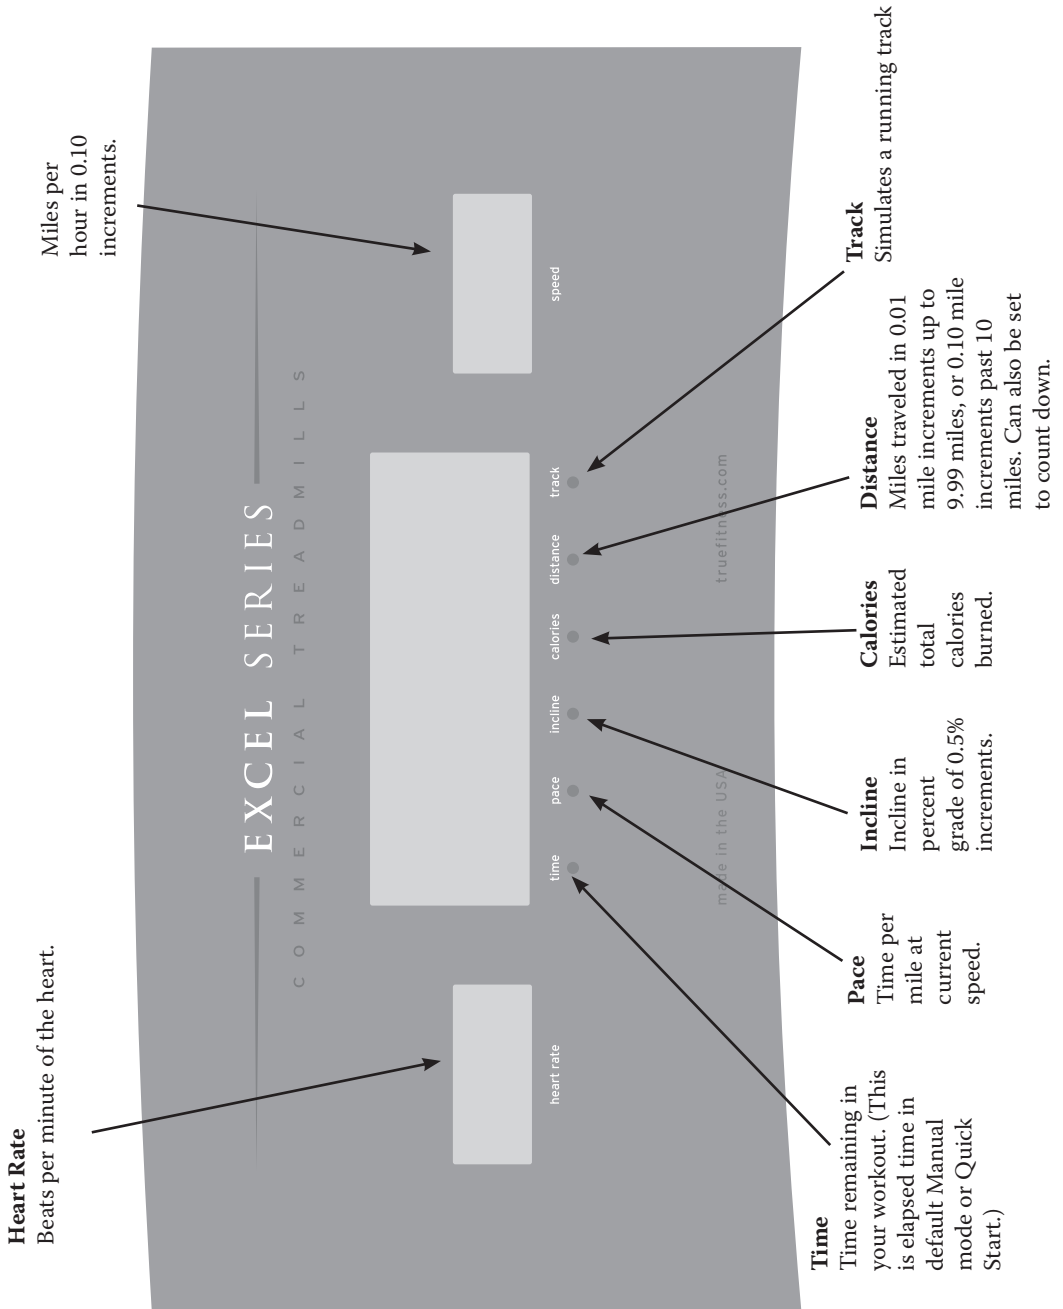

# USER PROGRAMS

IN THIS CHAPTER:

HOW TO RECORD AND RUN USER PROGRAMS

Chapter 1: Basic Operations

Chapter 2: The Console

**Chapter 3: User Programs**

Chapter 4: Fitness Tests

Chapter 5: Fan Accessories


Chapter 6: Designing an Exercise Program

Chapter 7: Care and Maintenance

# HOW TO RECORD & RUN USER PROGRAMS

## CHAPTER THREE: USER PROGRAMS


During a manually-controlled workout, the CS 6 and 8 treadmills always "record" the changes you make in speed or incline. They can save up to three User Programs

Note that this workout recording *only* takes place when you press Quick Start  *only* and use the default manual mode settings; you cannot choose a target workout time or distance. Time must count up during your workout in order to be recorded.

Up to 36 changes in speed or incline can be recorded. Each speed/incline pair of changes must be separated by at least 30 seconds.

To save a manual workout, press  as you normally would to end your workout. Now press and hold  until the display shows Save User 1.

You can save your workout in User 1, or press  to select User 2 or User 3. Press and hold  to save the workout program you have selected.

To use a User Program that you have saved, simply select it from the list of programs under the Advanced Options  key.

---

### HOW TO RECORD AND RUN USER PROGRAMS

# FITNESS TESTS

IN THIS CHAPTER:

ABOUT THE GERKIN FITNESS TEST  
RUNNING THE GERKIN TEST  
MILITARY FITNESS TESTS

Chapter 1: Basic Operations

Chapter 2: The Console

Chapter 3: User Programs

**Chapter 4: Fitness Tests**

Chapter 5: Fan Accessories


Chapter 6: Designing an Exercise Program

Chapter 7: Care and Maintenance

# GERKIN FITNESS TEST

## CHAPTER FOUR: FITNESS TESTS

One way to measure your overall fitness is to take a Gerkin fitness test. Named after the Arizona researcher who designed this test, this submaximal treadmill test (submaximal means you work below maximum effort) is used to predict VO<sub>2</sub> max: the volume of oxygen you can consume while exercising at your maximum capacity. This particular test has gained great popularity in the firefighter and law enforcement community. Like most fitness tests, it is classified as a graded exercise test (GXT). The test is stopped at the point your heart rate reaches 85% of your age-predicted maximum.

Select the Gerkin test under the Advanced Options  key. Enter your age, which is used to calculate your test termination point.

The Gerkin protocol starts at 4.5 miles per hour at a 0% incline. It then increases speed or incline every 60 seconds. For example, at the seven-minute mark, the speed increases to 6 miles per hour while the incline raises to 8%.

When your heart rate reaches 85% of your age-predicted maximum, the test waits for your heart rate to exceed the target for 15 seconds, then terminates the test.

*The version of the Gerkin Protocol that True Fitness uses in its exercise machines is the new equation of  $205.8 - 0.685 * \text{age}$ . To better understand why we selected this method over the outdated “220 – age” maximal heart rate equation, you can review the scientific paper in Journal of Exercise Physiology, a PDF document located at <http://www.asep.org/Documents/Robergs2.pdf>.*

### ABOUT THE GERKIN TEST

### RUNNING THE GERKIN TEST



# ACCURACY OF THE GERKIN TEST

## CHAPTER TWO: FITNESS TESTS

### ACCURACY OF THE GERKIN TEST

The scientific journal, Occupational Medicine, published a study in 2004 on the accuracy of the Gerkin test. The conclusion:

*“The Gerkin treadmill protocol overpredicts VO2max in healthy men and women and, therefore, should not be used for predicting VO2max in individual firefighters, particularly if VO2max is a criterion for inclusion or exclusion from duty. At this time, a valid treadmill running test is needed for predicting the VO2max value of individual firefighters.”*

However, for the fitness enthusiast who is interested in monitoring their fitness level, the Gerkin test can be used to measure progress over time.

---

# MILITARY FITNESS TESTS

## CHAPTER FOUR: FITNESS TESTS

Each of the four service branches has their own fitness test protocol. All of them work in the same basic way: you input personal information, then run a set distance as fast as you can. A score will then be displayed based on the scoring table for the chosen protocol.

**Warning:** You must take great care when running a maximal test on a treadmill. As you tire, your balance may diminish. Always use extreme caution to prevent excessive fatigue.

### Army Test

1. Enter sex.
2. Enter age.
3. Press Start to run 2-mile test.

### Navy Test

1. Enter sex.
2. Enter age.
3. Enter above or below 5000-foot altitude.
4. Press Start to run 1.5-mile test.

### Air Force Test

1. Enter sex.
2. Enter age.
3. Press Start to run 1.5-mile test.

### Marines Test

1. Enter sex.
2. Press Start to run 3-mile test.

## MILITARY FITNESS TESTS

# FANS

IN THIS CHAPTER:

FANS ON CS TREADMILLS

Chapter 1: Basic Operations

Chapter 2: The Console

Chapter 3: User Programs

Chapter 4: Fitness Tests

**Chapter 5: Fan Accessories**

Chapter 6: Designing an Exercise Program

Chapter 7: Care and Maintenance

# FANS ON CS

## CHAPTER FIVE: AUDIO AND FAN ACCESSORIES

The fans have two speeds plus off. The default is low speed.

### FANS ON CS TREADMILLS



# DESIGNING AN EXERCISE PROGRAM

IN THIS CHAPTER:

WHAT IS THE F.I.T. CONCEPT?  
USING THE F.I.T. CONCEPT  
YOUR FITNESS PROGRAM  
DETERMINING YOUR NEEDS  
BEGINNING YOUR EXERCISE PROGRAM  
ESTABLISHING AND MAINTAINING AEROBIC  
FITNESS  
MANAGING WEIGHT  
SPORTS TRAINING

Chapter 1: Basic Operations

Chapter 2: The Console

Chapter 3: User Programs

Chapter 4: Fitness Tests

Chapter 5: Fan Accessories

**Chapter 6: Designing an Exercise Program**

Chapter 7: Care and Maintenance

# THE F.I.T. CONCEPT DEFINED

## CHAPTER SIX: DESIGNING AN EXERCISE PROGRAM

The workout portion of your exercise program consists of three major variables: Frequency, Intensity, and Time.

### **Frequency: How Often You Exercise**

You should exercise three to five times a week to improve your cardiovascular and muscle fitness. Improvements are significantly smaller with less frequent exercise.

### **Intensity: How Hard You Exercise**

Intensity of exercise is reflected in your heart rate. Exercise must be sufficiently rigorous to strengthen your heart muscle and condition your cardiovascular system. Only your doctor can prescribe the target training heart range appropriate for your particular needs and physical condition.

Start with exercise that stimulates you to breathe more deeply.

Alternate days of moderate and easy exercise to help your body adapt to new levels of exertion without unnecessary strain.

If you are just beginning an exercise program, you may be most comfortable walking at a speed of 1-2 mph. As you use your treadmill regularly, higher speeds may be more comfortable and more effective.

Inability to maintain a smooth, rhythmic motion suggests that your speed and/or elevation may be too great.

If you feel out of breath before you have exercised 12 minutes, you are probably exercising too hard.

WHAT IS THE  
F.I.T. CONCEPT

As your fitness level improves, you will need to increase your workout intensity in order to reach your target heart rate. The first increase may be necessary after two to four weeks of regular exercise. Never exceed your target heart rate zone. Increase the speed and/or incline on the treadmill to raise your heart rate to the level recommended by your doctor. The incline feature can be used to greatly increase the workload without increasing speed.

### **METs**

One MET is the amount of energy your body uses when you're resting. If a physical activity has an equivalent of 6 METs, its energy demands are 6 times that of your resting state. The MET is a useful measurement because it accounts for differences in body weight. See *Appendix C* for more details.

### **Time: How Long You Exercise**

Sustained exercise conditions your heart, lungs, and muscles. The longer you are able to sustain exercise within your target heart range, the greater the aerobic benefits.

To begin, maintain two to three minutes of steady, rhythmic exercise and then check your heart rate.

The initial goal for aerobic training is 12 continuous minutes.

Increase your workout time approximately one or two minutes per week until you are able to maintain 20-30 continuous minutes at your training heart rate.

---

# UTILIZING THE F.I.T. CONCEPT

## CHAPTER SIX: DESIGNING AN EXERCISE PROGRAM

The F.I.T. concept and chart are designed to help you begin a program tailored to your needs. You may wish to keep an exercise log to monitor your progress.

---

You can get valuable fitness benefits from your True Treadmill. Using the treadmill regularly may increase the ability of your heart and lungs to supply oxygen and nutrients to exercising muscles over an extended period of time. The treadmill will also help you develop added muscle endurance and balanced strength throughout your body.

Calculate your maximum heart rate as a first step in developing your fitness program. The formula to calculate average maximum heart rate for one minute is 220 beats per minute minus your age. To find your pulse, locate a vein on your neck or inside your wrist, then count beats for ten seconds, then multiply by six. (See chart in *Appendix A.*)

It's also important to know your target training zone or target heart rate. The American Heart Association (AHA) defines target heart rate as 60-75 percent of your maximum heart rate. This is high enough to condition, but well within safe limits. The AHA recommends that you aim for the lower part of the target zone (60 percent) during the first few months of your exercise program. As you gradually progress you can increase your target to 75 percent. According to the AHA, "Exercise above 75 percent of the maximum heart rate may be too strenuous unless you are in excellent physical condition. Exercise below 60 percent gives your heart and lungs little conditioning."

USING THE  
F.I.T. CONCEPT

YOUR FITNESS  
PROGRAM

DETERMINING  
YOUR NEEDS

In addition to monitoring your heart rate as you exercise, be certain of how quickly your heart rate recovers. If your heart rate is over 120 beats per minute five minutes after exercising, or is higher than normal the morning after exercising, your exertion may be too strenuous for your current level of fitness. Reducing the intensity of your workout is recommended.

The age-adjusted target heart rates indicated in the chart in *Appendix A* reflect averages. A variety of factors (including medication, emotional state, temperature, and other conditions) can affect the exercise heart rate appropriate for you.

**Warning:** Consult your doctor to establish the exercise intensity (target heart rate zone) appropriate for your age and condition before beginning any exercise program.

BEGINNING  
YOUR  
EXERCISE  
PROGRAM

---

### Warm-Up: Slow and Deliberate Exercise

You are not warmed up until you begin to perspire lightly and breath more deeply. Warming up prepares your heart and other muscles for more intense exercise and helps you avoid premature exhaustion. Begin each workout by walking even if you plan to run. Start slowly, exploring different speeds until you can comfortably sustain your speed.

A good suggestion is a minimum of three minutes. Perspiration on your brow is a good indicator of a thorough warm-up. The older you are, the longer your warm-up period should be.

# YOUR F.I.T. PROGRAM CONTINUED

## CHAPTER SIX: DESIGNING AN EXERCISE PROGRAM

### **Workout: Brisk and Rhythmic Exercise**

The workout trains and conditions your heart, lungs, and muscles to operate more efficiently. Increase exercise in response to your heart rate to train and strengthen your cardiovascular system. Concentrate on moving your arms and legs smoothly. Walk naturally and avoid jerking motions that can cause pulled muscles, sprained joints, and loss of balance.

### **Cool-Down: Slow and Relaxed Exercise**

Cooling down relaxes your muscles and gradually lowers your heart rate. Slowly reduce your workload until your heart rate is below 60 percent of your maximum heart rate. The cool down should last at least five minutes, followed by some light stretching to enhance your flexibility.

### **Beginning a Fitness Program**

If you cannot sustain 12 continuous minutes in your target heart rate zone, exercise several times a day to get into the habit of exercising.

Try to reach and maintain 60-65 percent of your maximum heart rate. Alternate exercise with periods of rest until you can sustain 12 continuous minutes of exercise at 60-65 percent of your maximum heart rate.

Begin exercising in three to five minute sessions.

---



## ESTABLISHING AND MAINTAINING FITNESS

### CHAPTER SIX: DESIGNING AN EXERCISE PROGRAM

#### ESTABLISHING AEROBIC FITNESS

If you can sustain 12 but not 20 continuous minutes of exercise in your target heart rate zone:

Exercise three to five days a week.

Rest at least two days per week.

#### MAINTAINING AEROBIC FITNESS

Try to reach and maintain 60-75 percent of your maximum heart rate with moderate rhythmic exercise.

Begin with 12 continuous minutes. Increase your time by one to two minutes per week until you can sustain 20 continuous minutes.

---

#### MANAGING WEIGHT

If you can sustain 20 continuous minutes in your target heart rate zone, begin to increase the length and intensity of your workout:

Exercise four to six days a week or on alternate days.

Try to reach and maintain 70-85 percent of your maximum heart rate with moderate to somewhat hard exercise.

Exercise for 20-30 minutes.

---

Consistent aerobic exercise will help you change your body composition by lowering your percentage of body fat. If weight loss is a goal, combine an increase in the length of your workouts with a moderate decrease in caloric intake. For weight control, how long and how often you exercise is more important than how hard you exercise.

# WEIGHT AND SPORTS TRAINING PROGRAMS

## CHAPTER SIX: DESIGNING AN EXERCISE PROGRAM

Exercise four to five times a week.

Try to reach and maintain 60-75 percent of your maximum heart rate with moderate exercise.

Exercise for 30-45 minutes at 60-65 percent of your target heart rate.

### ***Here are some tips to achieving your weight management goal:***

Consume most of your dietary calories at breakfast and lunch, and eat a light dinner. Do not eat close to bedtime.

Exercise before meals. Moderate exercise will help suppress your appetite.

Take exercise breaks throughout the day to help increase metabolism (calorie expenditure).

---

### ***When you are training to improve strength and performance:***

Exercise four to five days a week. Alternate exercise days and intervals of hard to very hard exercise with easy to moderate exercise.

Exercise for 30 minutes or longer.

**Warning:** these strategies are intended for average healthy adults. If you have pain or tightness in your chest, an irregular heartbeat, shortness of breath or if you feel faint or have any discomfort when you exercise, **stop!** Consult your physician before continuing. Remember, every workout should begin with a warm-up and finish with a cool-down.

---

SPORTS  
TRAINING

# CARE AND MAINTENANCE

## IN THIS CHAPTER:

REGULAR CLEANING

CALIBRATION

TREADBELT ADJUSTMENT

Chapter 1: Basic Operations  
Chapter 2: The Console  
Chapter 3: User Programs  
Chapter 4: Fitness Tests  
Chapter 5: Fan Accessories  
Chapter 6: Designing an Exercise Program  
**Chapter 7: Care and Maintenance**

# REGULAR CLEANING

## CHAPTER SEVEN: CARE AND MAINTENANCE

**Caution:** except for the areas described below, all service on this treadmill should be performed by a qualified fitness equipment technician. During the warranty period, please contact your dealer for service.

The treadmill console and handrails should be wiped down with a clean, dry towel after every workout.

Once a day, the treadmill console and handrails should be wiped down with a mild, dilute soap solution. Do not use any other kind of cleaner or solvent.

To extend the life and appearance of the treadmill, perform the following tests and inspections weekly:

1. Test all the keys.
2. Inspect the power cord for frayed or damaged areas.
3. Inspect the power cord ground plug.
4. Inspect the circuit breaker to see if it is tripped.
5. Inspect the treadbelt for proper tension and alignment.
6. Check that the handrail screws are tight.
7. Check that the ON/OFF switch toggles on and off.
8. Check that the pedestal screws, pedestal hinge screws, and motor cover screws are tight.
9. Check that the heart rate contacts are working.

Clean the treadmill of dust and dirt that might accumulate under and behind the treadmill. Vacuum small rubber particles that accumulate alongside the belt and behind the treadmill — these particles are from the soles of running shoes.

GENERAL  
CLEANING

WEEKLY  
INSPECTION

MONTHLY  
CLEANING

### CALIBRATION

This procedure is used to ensure speed and incline accuracy. It should be done following any moving of the treadmill to a different location in your facility, as well as following any internal service.

#### **CS 6.0 & CS 8.0 Calibration**

1. Remove safety key and straddle treadbelt with your feet on the straddle covers.
2. On the balance bar control pod, press and hold incline up and down. The display should read CALIBRATION.
3. Press Start. The treadmill will slowly increase speed and incline to maximum values then decrease to zero.
4. The display should read CALIBRATION SUCCESSFUL. If it does not, repeat steps 1 - 3. If it still does not calibrate successfully, call your dealer for service.
5. Remove safety key to exit calibration mode.

#### **CS 4.0 Calibration**

1. Remove safety key and straddle treadbelt with your feet on the straddle covers.
2. Press and hold the 0 and 2 keys, then press the Quickspeed key. The display should read PASS (short for PASSCODE).
3. Enter the following sequence: 3 9 4 0 1 and press Enter. The display should read CAL.
4. Press Start. The treadmill will slowly increase speed and incline to maximum values then decrease to zero.
5. The display should read PASS. If it does not, repeat steps 1 - 4. If it still does not calibrate successfully, call your dealer for service.
6. Remove safety key to exit calibration mode.

# TREADBELT ADJUSTMENT

## CHAPTER SEVEN: CARE AND MAINTENANCE

Your treadmill's running belt has been properly aligned at the factory. However, when the treadmill is used on an uneven surface, please follow these instructions:

- 1 - Stand beside the treadmill, place the safety key onto the control panel and follow operating instructions for running the treadmill at 5 mph.
- 2 - If the belt is off-center to the right, turn the left roller adjustment bolt counter clock-wise 1/4 turn. If the belt is off-center to the left, turn the left roller adjustment bolt 1/4 turn clockwise.
- 3 - Let the machine run for several minutes to check the alignment. (Belt alignment does not need to be perfect). If more correction is needed, turn the adjustment bolt 1/4 turn and check again.



 
## TREADBELT ADJUSTMENT

# TARGET HEART RATE CHART

A GUIDE TO HELP YOU PICK AN  
INITIAL TARGET HEART RATE

# APPENDIX A

TARGET HEART RATE CHART

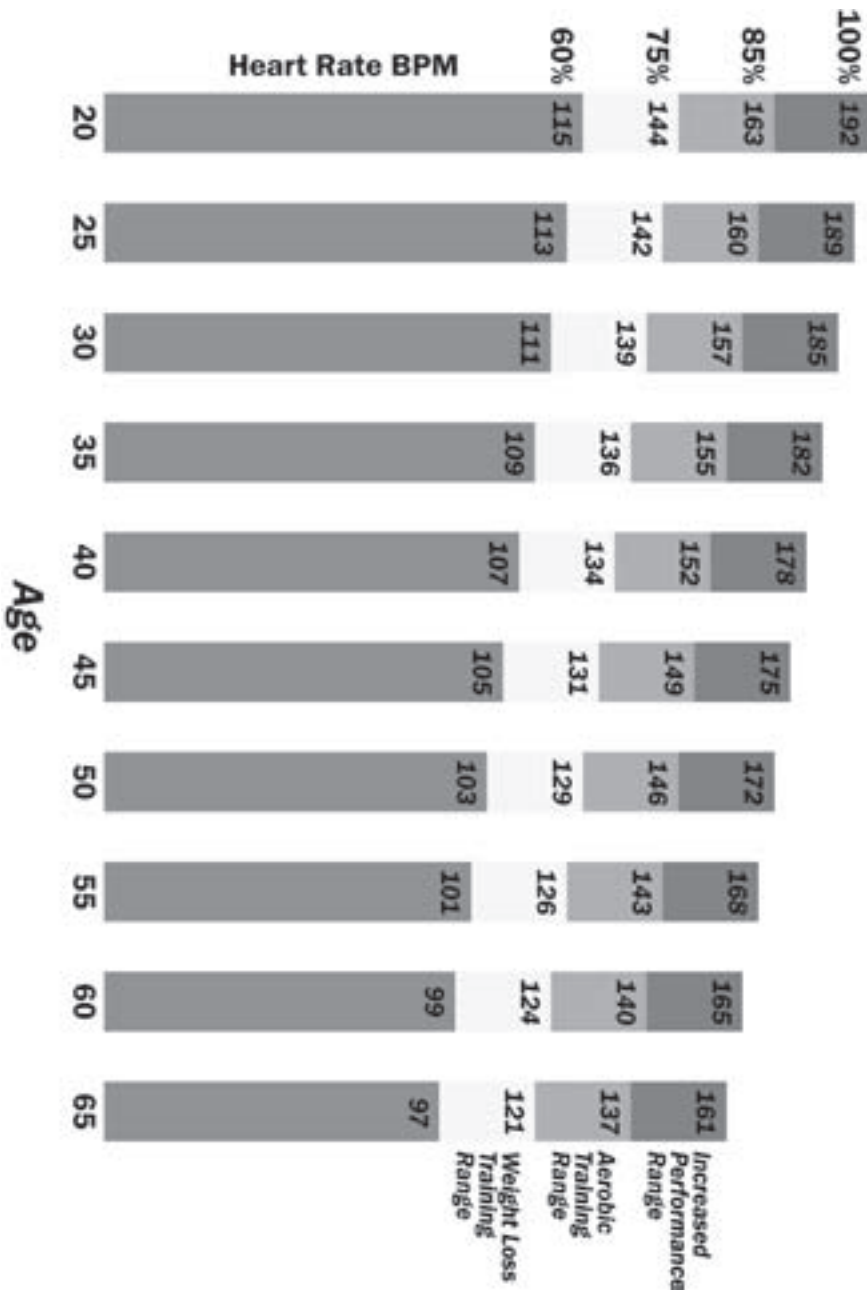

# METS TABLE

HOW SPEED AND INCLINE AFFECT  
WORKLOAD, EXPRESSED IN METS

# APPENDIX B

**Grade**

METs Table	0.0	1.0	2.0	3.0	4.0	5.0	6.0	7.0	8.0	9.0	10.0	11.0	12.0	13.0	14.0	15.0	
WALKING	1.0	1.8	1.9	2.0	2.2	2.3	2.5	2.6	2.7	2.9	3.0	3.1	3.3	3.4	3.6	3.7	3.8
	2.0	2.5	2.8	3.1	3.4	3.6	3.9	4.2	4.5	4.7	5.0	5.3	5.6	5.8	6.1	6.4	6.7
	3.0	3.3	3.7	4.1	4.5	5.0	5.4	5.8	6.2	6.6	7.0	7.4	7.8	8.3	8.7	9.1	9.5
IN-BETWEEN	4.0	5.6	6.0	6.4	6.8	7.2	7.7	8.1	8.5	8.9	9.3	9.7	10.1	10.6	11.0	11.4	11.8
	5.0	8.7	9.0	9.3	9.7	10.0	10.4	10.7	11.1	11.4	11.8	12.1	12.4	12.8	13.1	13.5	13.8
RUNNING	6.0	10.2	10.6	11.0	11.4	11.8	12.3	12.7	13.1	13.5	13.9	14.3	14.7	15.2	15.6	16.0	16.4
	7.0	11.7	12.2	12.7	13.2	13.6	14.1	14.6	15.1	15.6	16.1	16.5	17.0	17.5	18.0	18.5	19.0
	8.0	13.3	13.8	14.4	14.9	15.5	16.0	16.6	17.1	17.7	18.2	18.8	19.3	19.9	20.4	21.0	21.5
	9.0	14.8	15.4	16.0	16.6	17.3	17.9	18.5	19.1	19.7	20.4	21.0	21.6	22.2	22.8	23.5	24.1
	10.0	16.3	17.0	17.7	18.4	19.1	19.8	20.4	21.1	21.8	22.5	23.2	23.9	24.6	25.3	26.0	26.7
	11.0	17.8	18.6	19.4	20.1	20.9	21.6	22.4	23.2	23.9	24.7	25.4	26.2	26.9	27.7	28.5	29.2
	12.0	19.4	20.2	21.0	21.9	22.7	23.5	24.3	25.2	26.0	26.8	27.6	28.5	29.3	30.1	31.0	31.8

Miles Per Hour

# METS EXPLANATION AND FORMULAS

A NOTE ABOUT CALORIE EXPENDITURE  
CALCULATIONS

## APPENDIX C

 
True treadmills use the calorie expenditure formula as described in *Guidelines for Exercise Testing and Prescription* from the American College of Sports Medicine. This is the most widely accepted formula for running and walking.

The ACSM guide says that running burns calories twice as fast as walking, e.g., a 150-pound person jogging at 5 mph requires 548 calories per hour, while walking at 5 mph requires 274 per hour.

(Other respected researchers such as David Costill think the ACSM overstates the energy difference between running and walking. Costill believes running requires 60% more energy than walking, not 100% as calculated by the ACSM. Using the same example, Costill's calculations result in 496 cal/hour for running 5 mph, with 313 cal/hour for walking 5 mph.)

One potential source of calorie estimate error is that the treadmill doesn't know if you are running or walking, so it has to make some assumptions. It assumes you are walking at 3 mph and slower, and running at 5 mph and faster. Between those two speeds, the treadmill combines the walking and running formulas to make its best guess.

Variations in human exercise efficiency are another potential source of error, with differences of plus or minus 20% common in the population.

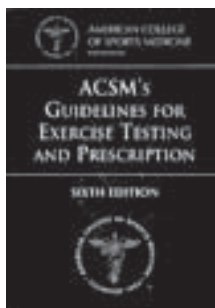

### A NOTE ABOUT CALORIE EXPENDITURE CALCULATIONS

# SPECIFICATIONS

THE SIZE AND PERFORMANCE ATTRIBUTES  
OF YOUR CS TREADMILL

## APPENDIX D

**Maximum speed:** CS 4 & 6: 12 mph. CS 8: 15 mph

**Incline range:** CS 4 & 6: 0-15%. CS 8: -3 to 18%

**Drive motor:** 5 hp AC Max Drive.

**Treadbelt area:** 23 x 63

**Treadmill Weight:** 505 pounds

**Maximum user weight:** 400 pounds.

**Note:** *Specifications and features subject to change without notice.*

## SPECIFICATIONS

# TRUE OFFERS A FULL LINE OF LEADING-EDGE CARDIOVASCULAR AND FLEXIBILITY EQUIPMENT.



**TS1 Elliptical**



**CS Series Bikes**



**CS Series Treadmills**



**TrueStretch Flexibility unit**



FOUNDED 1981

865 Hoff Road  
O'Fallon, MO 63366  
800.426.6570

[www.truefitness.com](http://www.truefitness.com)

part # 0C526700 v1:SR 5-07